

2、 DEMO ONE

Press the button **【3】** for 1 second , then you can hear a song circully. Press the button **【3】** again to stop playing. After finished , it will be back to tone slection mode .

6、 RHYTHM

1、 START/ STOP

While stop any mode of guide/record/play/program /play /demo/ metronome , press the button **【10】** to start the rthm mode ; press the button again to top the mode .

2、 SYNC

Press the button **【11】** to start the function, then press the button **【19】** and it will play the selected rthms . Press the button **【11】** again to stop the playing .
(THE CHORD SYNC FUNCTION PLEASE REFER TO THE SINGLE CHORD /FINGER CHORD ACCOMPANIMENT CONTROL).

7、 CHORD ACCOMPANIMENT MODE

1、 SINGLE CHORD

Press the button **【12】** to start the function. Then press the button **【8】** and the keyboard zone from C3-F4# by single finger fingering , you can hear the corresponding chord accompaniment rhythm .

2、 FINGER CHORD

Press the button **【13】** to start the function. Then press the button **【8】** and the keyboard zone from C3-F4# by multi finger fingering , you can hear the corresponding chord accompaniment rhythm. .(this function can be with the use of function rhythm/chord sustain)

3、 BASS CHORD

Press the button **【15】** to change from the bass tone to piano tone .

4、 CHORD OFF

Press the button **【16】** to stop the function of single chord / fingers chord / synthetic chord .

8、 RECORD AND PLAY

1、 RECORD

Press the button **【17】** to enter mode . Press any keys or drum button to start the function ,and press the button **【18】** to play the recorded notes . It can record up max 92 notes .

2、 PROGRAM

Press the button **【19】** to enter the mode ,which can record the drums (the keyboard changed be into the keyboard drum in this mode) . The max recorded drum is 32 and press button **【18】** to play the prog drums.

3、 PLAY

Press the button **【18】** to play the recorded notes , or the prog drums .

9、 METRONOME

1、 Press the button **【26】** . and then it will change the beat to be 1/4 time---2/4 time---3/4 time---4/4 time --- stop ---then 1/4 time the acquiescene tone is the 120

There are totally 4 styles on the beat ,including 1/4 time---2/4 time---3/4 time---4/4 time .

10、 EFFECT CHANGE

1、 TONE CONTROL

Press the button **【20】** to extend the tone .



Press the button **【21】** to tremble the tone.

2、 DOUBLE KEYBOARD

Press the button **【25】** to start the function . The musical scale C3-B4 will change to C4-B5 correspondly . The musical scale C5-C8 will change to C4-C7 . You can select the main tone instead of the original tone in C5-C8 .

3、 KEYBOARD DRUM

Press the button **【24】** to play the tone on the corresponding drum keyboard.

4、 BOARD DRUM

Press the button **【31】** to play 8 kinds of drums . In the program mode , the board drum will automatically change into the animal crying .

11、 GUIDE MODE

1、 SINGLE BOND (GUIDE A)

Press the button **【22】** to start the function . Press the white keys to select different songs and then press any key to be main melody . If the melody still do not reach the next beat , the melody will reat the beat until the selected song finished .

2、 ENSEMBLE (GUIDE B)

Press the button **【23】** to start the function . Press the white keys to select different songs . After finished , player play the main melody by self . The main melody will play completely until the selected song finished .

12、 KEYBOARD MAINTENANCE INSTRUCTION



TO KEEP THE KEYBOARD IN GOOD CONDITION ,

PLEASE NOTE THE FOLLOWINGS :

- 1、 Before playing , please connect the wire then turn on the switch ; Close the switch and turn off the power after finished playing .
- 2、 When do not play the keyboard , take out the batter to avoid corrode .
- 3、 Keep far away from the hot source to avoid damage of the component .
- 4、 Take care off the keybaord after playing , to avoid the liquid & dirt enter into the keyboard and corrode the component .
- 5、 Do not clean thekeyboard with the paint , alcohol or other chemical liquid .
- 6、 Avodi the collision of the keyboard to damage the component of the keyboard .
- 7、 Use the soft packages to protect the keyboard during the carry .




SK-20066 MANUAL INSTRUCTION

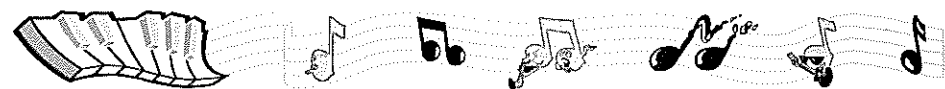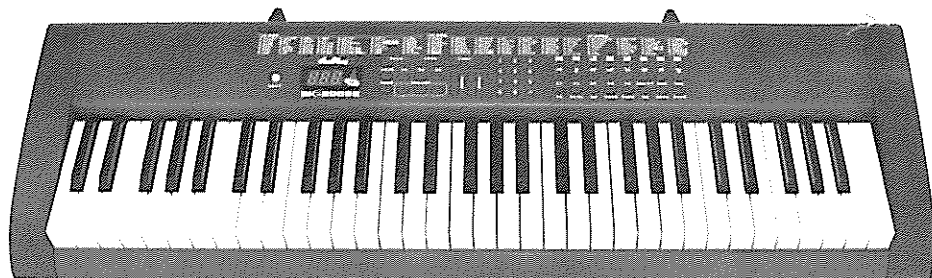

- ◇ 61 LED ELECTRONIC KEYBOARD WITH PIANO KEYS
- ◇ 128 RHYTHMS, 128 TONES, 30 DEMOS
- ◇ 3 DIGITAL DISPLAY
- ◇ MAIN VOLUME CONTROL, CHORD VOLUME CONTROL
- ◇ TEMPO CONTROL, TRANSPOSE, RECORD, PLAY, PROGRAM
- ◇ SINGLE CHORD, FINGERS CHORD, BASS CHORD, CHORD OFF
- ◇ VARIABLE METRONOME, DEMO ONE, DEMO ALL
- ◇ KEYBOARD DRUM, 8 DRUMS, DOUBLE KEYBOARD
- ◇ START / STOP, SYNC, FILL - IN
- ◇ SUSTAIN, VIBRATO, TEACHING
- ◇ EARPHONE JACK, MIC JACK, DC 9V JACK
- ◇ THERE WOULD BE ANY AMENDMENT ON THE TECHNOLOGY AND SPECIFICATION WITHOUT NOTICE.

1、 FRONT VIEW / BACK VIEW


1) FRONT VIEW

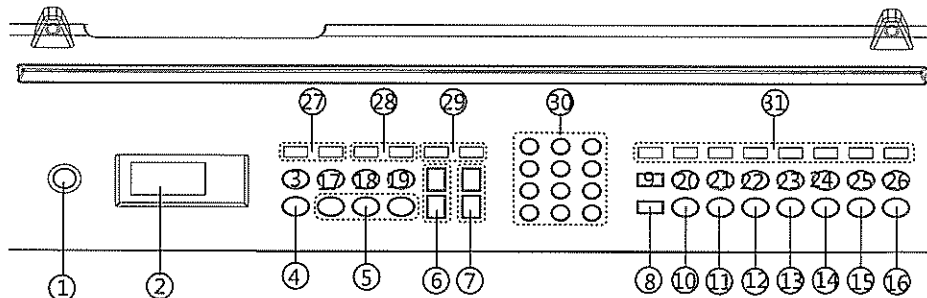

- | | | |
|-------------------|------------------|------------------|
| 1) POWER ON/OFF | 7) TEMPO CONTROL | 13) FINGER CHORD |
| 2) LED DISPLAY | 8) RHYTHM | 14) FILL-IN |
| 3) DEMO ONE | 9) TONE | 15) BASS CHORD |
| 4) DEMO ALL | 10) START/STOP | 16) CHORD OFF |
| 5) TONE | 11) SYNC | 17) RECORD |
| 6) VOLUME CONTROL | 12) SINGLE CHORD | 18) PLAY |

- | | | |
|-----------------|---------------------|-------------------|
| 19) PROG | 23) ENSEMBLE | 27) CHORD VOLUME |
| 20) SUSTAIN | 24) KEYBOARD DRUM | 28) RHYTHM VOLUME |
| 21) VIBRATO | 25) DOUBLE KEYBOARD | 29) TRANSFER |
| 22) SINGLE BOND | 26) METRONOME | 30) NUMBER BUTTON |
| | | 31) DRUMS |

- 2) BACK VIEW
- 32) DC 9V JACK
- 33) EARPHONE JACK
- 34) MICROPHONE JACK

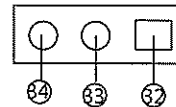

2、 PERPARATION

1. USING THE EXTERNAL POWER

Please use the special adaptor for the keyboard . Connect the wire with the corresponding outlet and AC power.

2. USE THE BATTERIES

Open the cover at the bottom of the keyboard ,insert 6 pieces "AA" and cover the compartment .

3. POWER ON/OFF

Press the POWER button 【1】 , the LED will light.

4. MICROPHONE AND EARPHONE

Put the microphone into the outlet 【34】 ,then you can play and sing together ; Put the earphone into the outlet 【32】 , then you can play silently .

3、 OPERATION

1. VOLUME CONTROL

Press the button 【6】 to adjust the volume .

2. RHYTHM VOLUME CONTROL

Press the button 【28】 to increase or decrease the volume of the rhythm.

3. CHORD VOLUME CONTROL

Press the button 【27】 to increase or decrease the volume of the chord .

4. TEMPO CONTROL

Press the button 【7】 to adjust the speed of the rhythm, tone and demo .

5. TRANSFER

Press the button 【29】 to increase up or decrease a semitone .

4、 MODE SELECTION

1. NUMBER KEYS ZONE

Press the button 【30】 , or button "+" "-" to select the numbers .

2. SELECT THE TONE

Press the button 【9】 to enter into the tone status ; press the button 【30】 to change the tone code in sequence .

3. SELECT THE RHYTHM

Press the button 【8】 to enter into the rhythm status; press the button 【30】 to change the rhythm code in sequence.

5、 DEMO SONGS

1. DEMO ALL

Press the button 【4】 for 1 second, then you can hear a song from song 1 to song 10 in an order . You can press button 【30】 or "+" "-" to select a song . Press button 4 again to stop playing .